



# Samsung Galaxy Note 3 Headphone Jack Replacement

Your headphone jack isn't working, use this guide to replace it.

Written By: Brittany Gail



## INTRODUCTION

This guide explains the way to replacing the headphone jack.



### TOOLS:

- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)



### PARTS:

- [Galaxy Note 3 Headphone Jack \(Verizon/Sprint\)](#) (1)

## Step 1 — Remove the rear case



- Insert the plastic opening tool in the gap between the rear case and the base of the phone.
- Twist the plastic opening tool.

## Step 2 — Remove Case from the Base



- Slide the plastic opening tool along the edge of the rear case.
- Lift the case gently from the base.



## Step 3 — Battery




- Insert the plastic opening tool into the small gap between the battery and the phone base.
- Lift the battery out of its placeholder.

## Step 4 — S Pen




- Place your fingernail in the groove of the stylus pen.
- Pull the stylus pen away from the phone.

## Step 5 — Unscrew Back Chassis

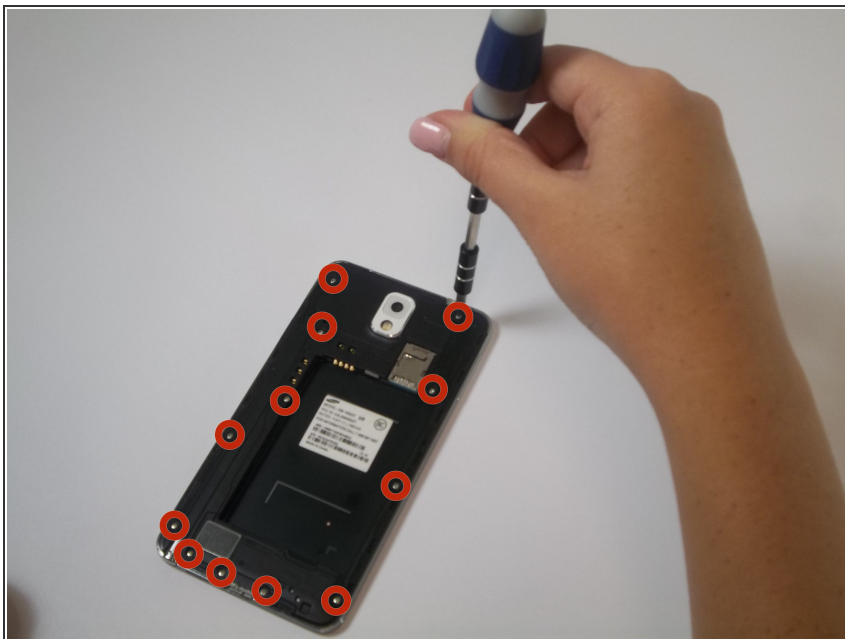

- Remove the twelve 4mm Phillips #00 screws from the back chassis.

## Step 6 — Remove Back Chassis

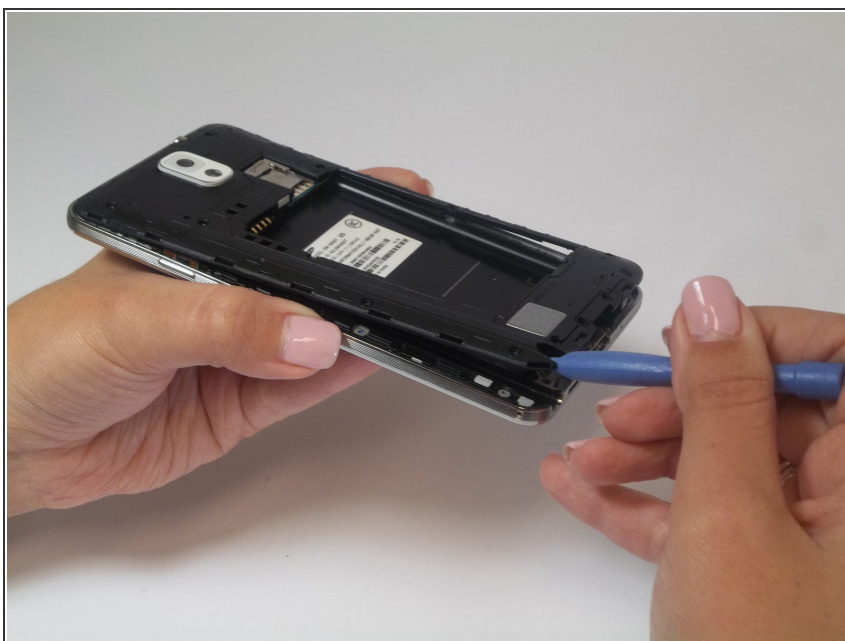

- Insert the plastic opening tool into the Stylus Pen placement holder.
- Lift the plastic opening tool so that the midframe separates from the base.




## Step 7 — Screw Removal




- Remove the single screw beside headphone jack.

## Step 8 — Unfasten Clips and Cable Connectors

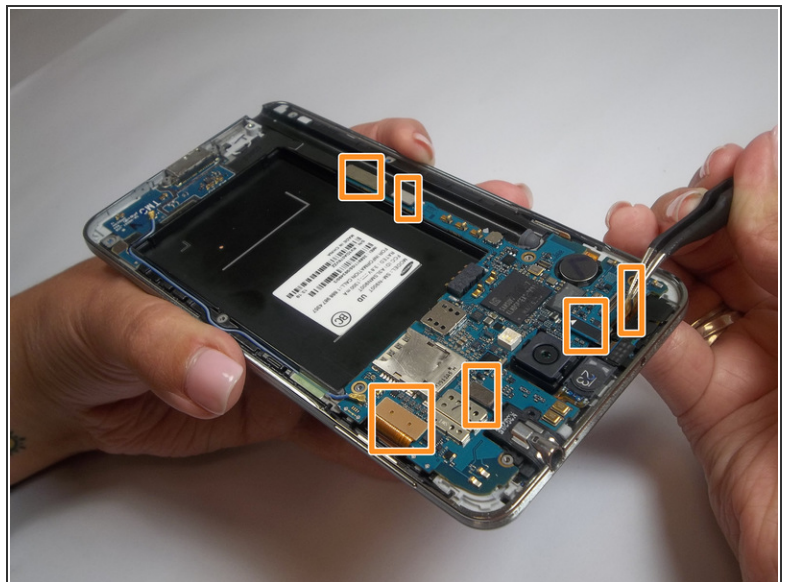

- Use tweezers to remove both antenna clips.
- Use a spudger to disconnect six cable connectors.

## Step 9 — Motherboard Removal

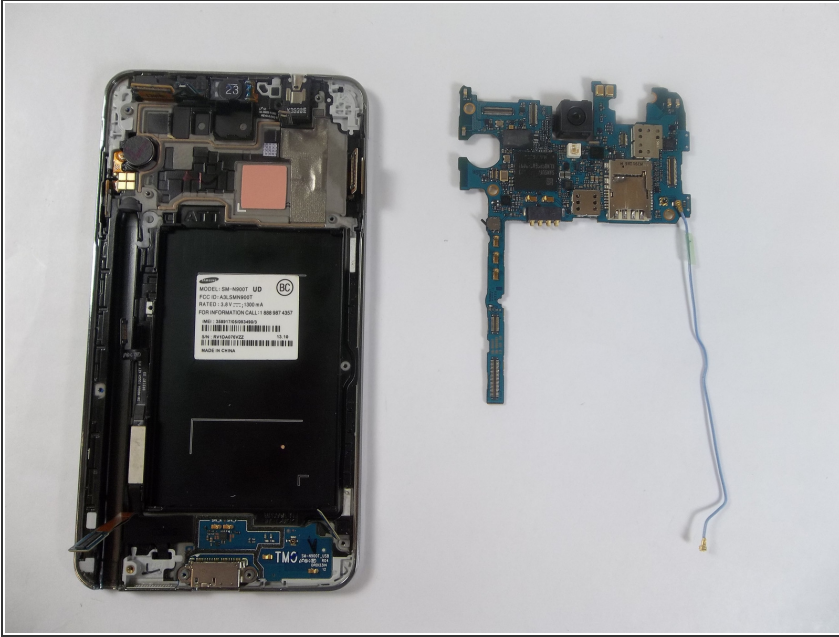

- Pull up on the motherboard with tweezers.

## Step 10 — Spudger Tool Placement



- Insert the spudger into the headphone jack.

## Step 11 — Lift to Separate Headphone Jack



- Lift the spudger to separate the jack assembly from the motherboard.
- Pull to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-28 04:29:31 PM.